TSB #	SUBJECT	DATE
GI202510-55	Tech600Pro Wireless VCI Setup	10/27/2025

Overview:

How to pair the wireless **VCI** (Vehicle Communication Interface) to Bartec USA® Tech600Pro using Bluetooth™.

Description:

1. Plug the wireless **VCI** into the OBD-II port of the vehicle.
   - Ensure vehicle ignition is powered on (engine OFF)
   - The LED light on the **VCI** should be illuminated
2. From the home screen, select **Settings**.
3. Select **Connections**.
4. Select **Wireless VCI: Add device**.
5. The tool will begin to search for available devices via Bluetooth.
   - **Note**: If there are no devices found or the light on the **VCI** is not illuminated, make sure that the vehicle is in the RUN position (engine OFF) and that the **VCI** is securely in the OBD-II port.
6. Select the available **VCI** device to successfully pair with tool.

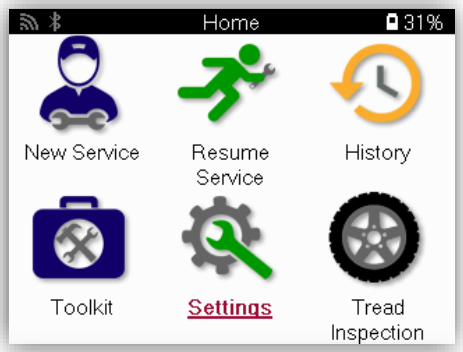

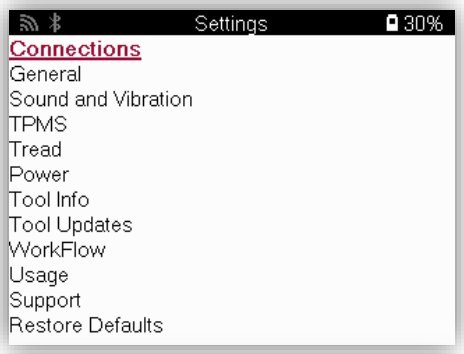

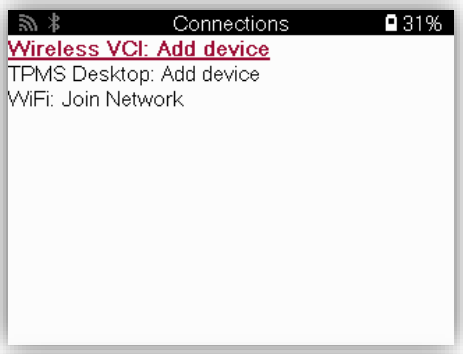

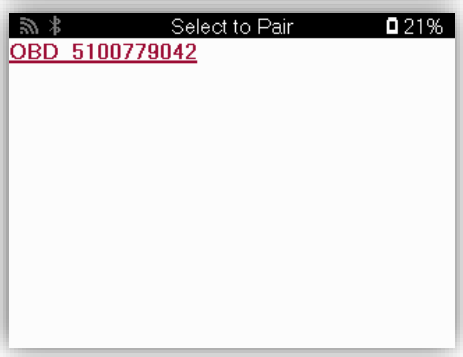

©2025, Bartec USA, LLC
Bartec USA Technical Support: [866]407-8767
Bartec makes commercially reasonably efforts to provide accurate and complete data in connection with our tools and our website, but the volume of data compiled and the variety of sources from which the data comes makes it impossible to warrant full accuracy or completeness of any kind. AS A RESULT, BARTEC DOES NOT WARRANT, AND SPECIFICALLY DISCLAIMS ANY WARRANTY, THAT OUR TOOLS, WEBSITE, AND/OR THE CONTENT CONTAINED THEREIN IS ACCURATE OR COMPLETE.